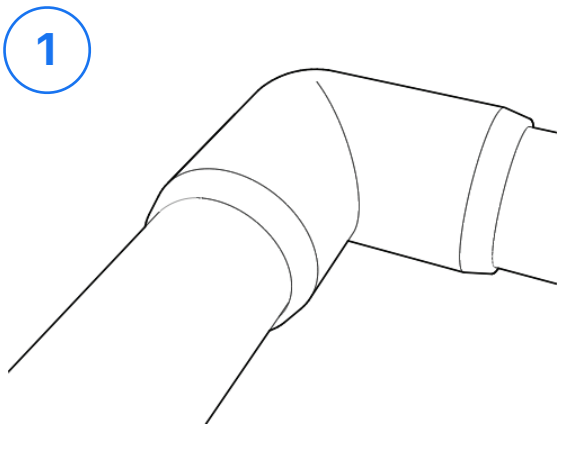
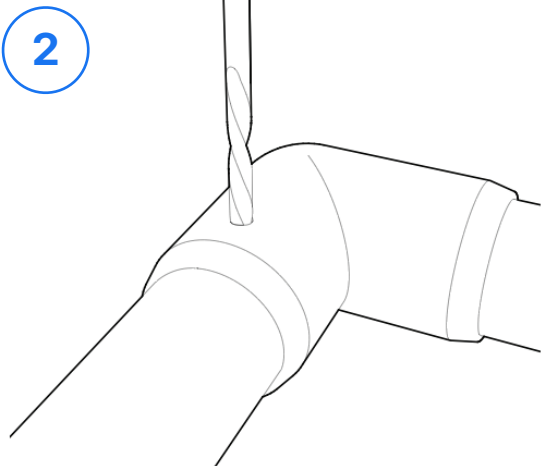
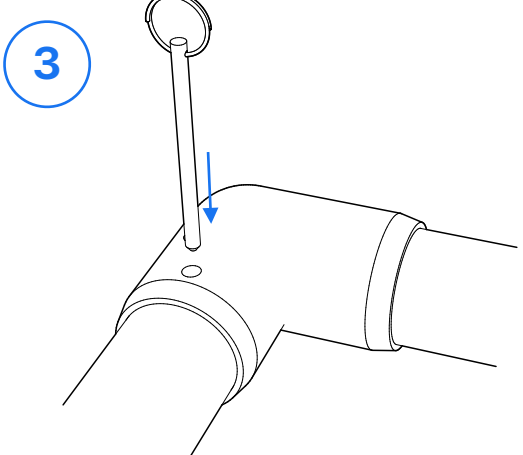
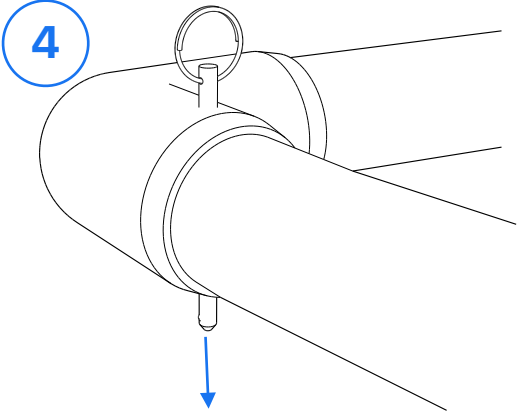


PRODUCT INSTRUCTIONS

Quick Release Pin





FORMUFIT Quick Release Pins can temporarily connect PVC pipe to fittings or telescoping pipe into itself. To use this product, follow the instructions shown below.


Pipe & Fitting Assembly

 <p>1</p>	 <p>2</p>
<p>Position the pipe and fitting together, make sure that the pipe is fully inserted.</p>	<p>Drill the appropriate size hole* where the pipe and fitting meet around 1/2" from the bevel, all the way through both sides of the pipe and fitting.</p>
 <p>3</p>	 <p>4</p>
<p>Insert the Quick Release pin into the fitting/pipe combo.</p>	<p>Make sure that the Quick Release Pin continues all the way through the fitting/pipe combo until the spring ball exits the opposite side.</p>

*Please see Quick Release Pin size hole recommendations at formufit.com.

Telescoping Pipe Assembly

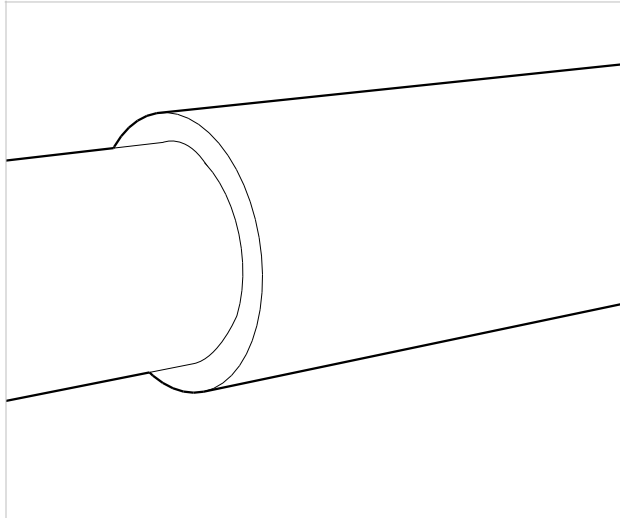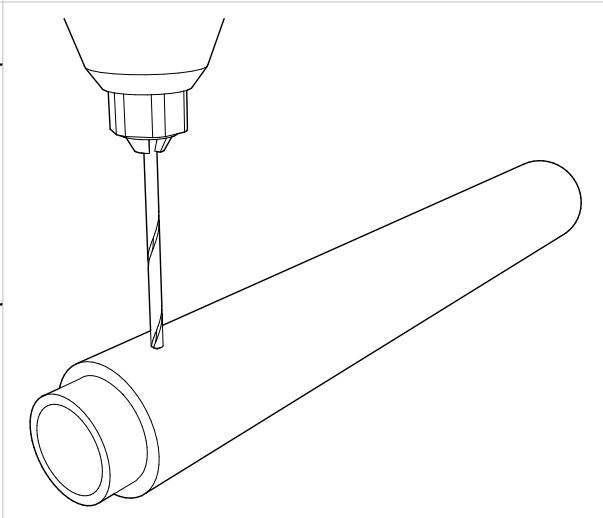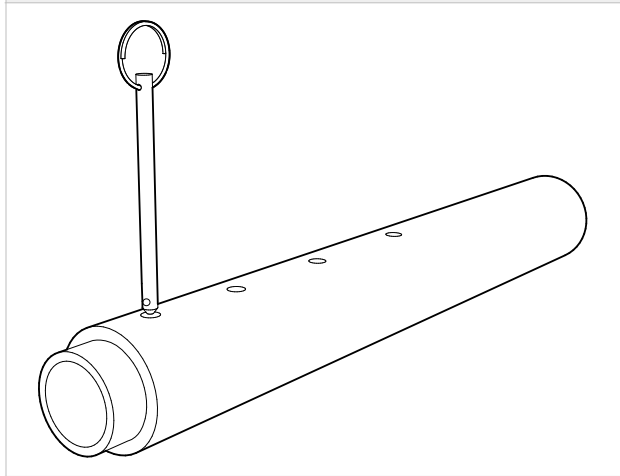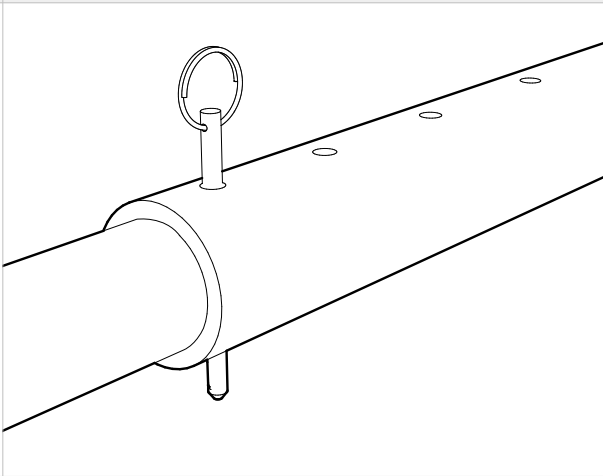	
<p>Insert the two telescoping pipe elements into each other. See our Telescoping Pipe page for more info and sizing applications.</p>	<p>Align the two pipe elements together where you need them, then drill through both segments, completely.</p>
	
<p>After drilling all appropriate holes, insert the Quick Release Pin into through both segments of the telescoping pipe.</p>	<p>Use the Quick Release Pin to position the telescoping pipe segments by removing and inserting into position.</p>

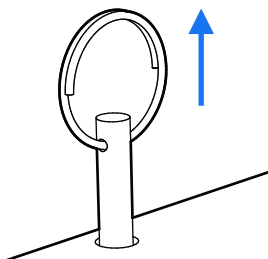

Removal

To remove the Quick Release Pin, simply pull the ring hard until removed.