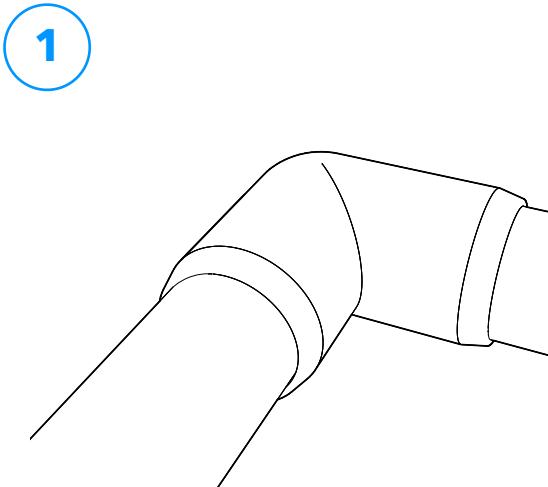
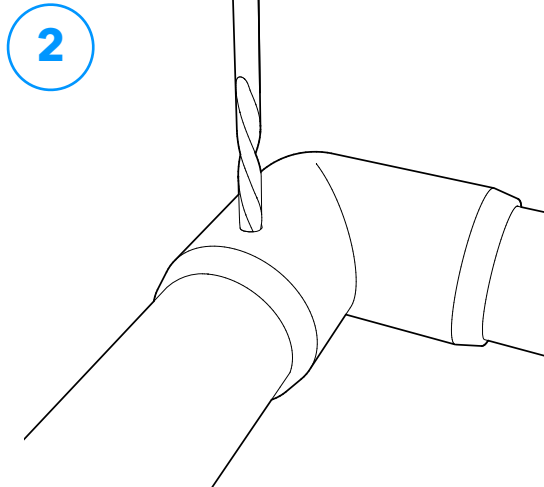
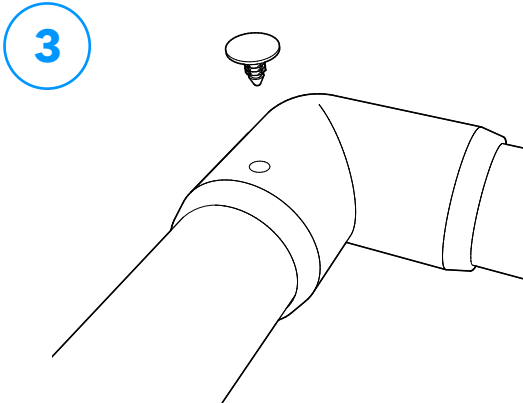
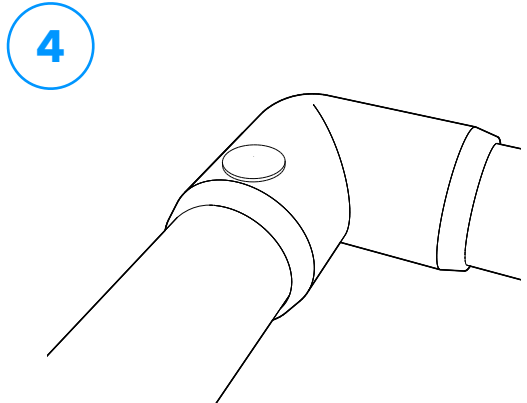


PRODUCT INSTRUCTIONS


PipeRivet

FORMUFIT PipeRivets are an easy-to-use alternative to PVC cement to connect PVC Pipe and fittings together. To use this product, follow the instructions shown below.

Assembly

 <p>1</p>	 <p>2</p>
<p>Position the pipe and fitting together, make sure that the pipe is fully inserted.</p>	<p>Drill the appropriate size hole* where the pipe and fitting meet around 1/2" from the bevel.</p>
 <p>3</p>	 <p>4</p>
<p>Clear the hole of any debris, then insert the PipeRivet into the recently drilled hole.</p>	<p>Tap into place with a hammer or other solid object until fully seated.</p>

*Please see PipeRivet size hole recommendations at formufit.com.

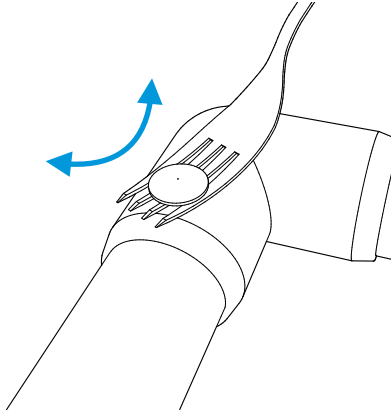

Removal

To remove the PipeRivet, simply insert a typical kitchen fork under the head of the rivet, then lift it back and forth until fully removed. You can then reuse the pipe and or fitting in another position. Please note that you will need to re-drill any additional holes for additional PipeRivets.

Securing

In most cases, only one PipeRivet will be required per connection point between pipe and fittings, however for additional support, you can use one on each side of a pipe-fitting connection.