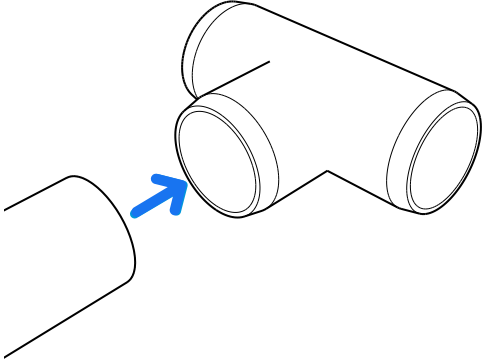
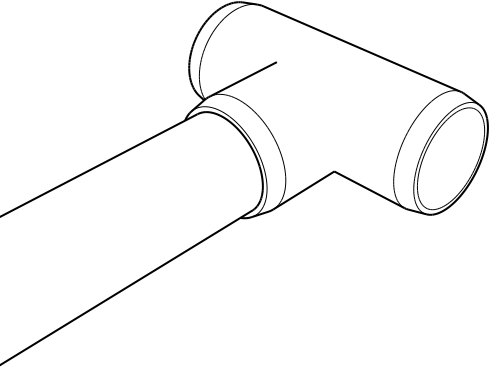


## PRODUCT INSTRUCTIONS

# Standard PVC Tee Fitting

FORMUFIT Tee PVC Fittings can accept up to three (3) segment of PVC pipe and can be used to flat planes along edges of structures. To connect this product to PVC pipe, follow the instructions shown below.

## Assembly

<p>1</p> 	<p>2</p> 
<p>Slip a segment of PVC pipe inside one of the sockets on the Tee fitting.</p>	<p>Push or tap into place until the pipe hits the stop inside of the socket. Repeat for each additional socket.</p>

## Securing

For permanent and strong connections, it is recommended to use PVC cement/solvent to attach the PVC pipe and Tee PVC fitting.

You can also temporarily connect this fitting by driving a self-tapping screw where the pipe and fitting meet, or apply electrical tape over the end of the pipe before inserting into the fitting for a temporary, yet strong connection.