


# PVC Mobile Safety Partition

a FORMUFIT PVC Plan

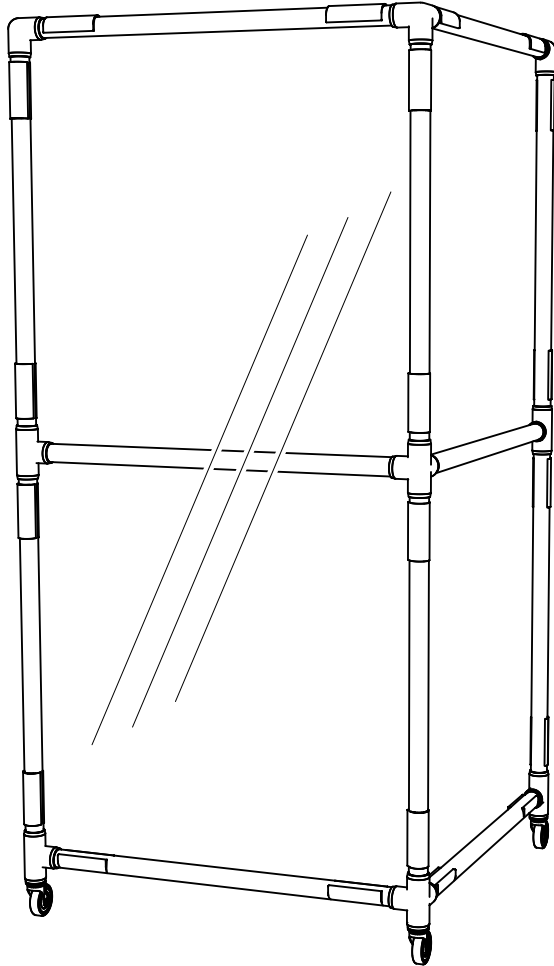



Important information.  
Read carefully.  
Keep this information for  
further reference.

## **WARNING**

**Serious or fatal injuries can occur from using power tools when cutting PVC pipe. Be sure to read and understand the instructions that came with your power tools before using them.**

**PVC cement is a noxious chemical that should be used in a well ventilated area. If you become dizzy, light-headed or disoriented, move to fresh air.**

## **Legal**

**DISCLAIMER:** The information provided within this manual is for informational purposes only. FORMUFIT accepts no responsibility, and is excluded from all liability for damage and/or loss which may be suffered by any other party as a result of using or in connection with such use or loss of use of this information, including but not limited to loss of profit, loss of opportunity, loss of business, indirect damages, incidental damages, special or consequential loss, injury or loss of life.

## **Additional Information**




For additional information on how to cut, prepare and assemble PVC, please review our FORMUFIT PVC Field Manuals available at:

<http://www.formufit.com/guides>


To order fittings, connectors, pipe or accessories for this project, visit FORMUFIT online at:

<http://www.formufit.com>








# Tools

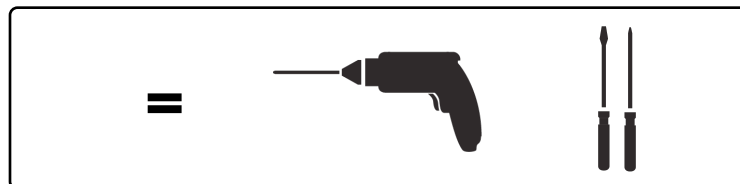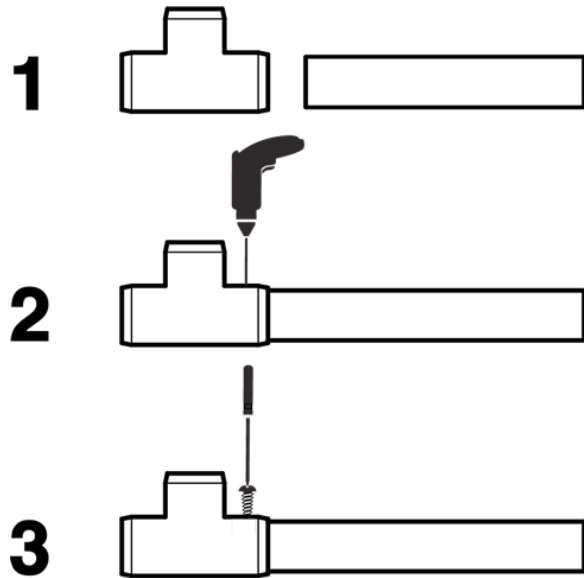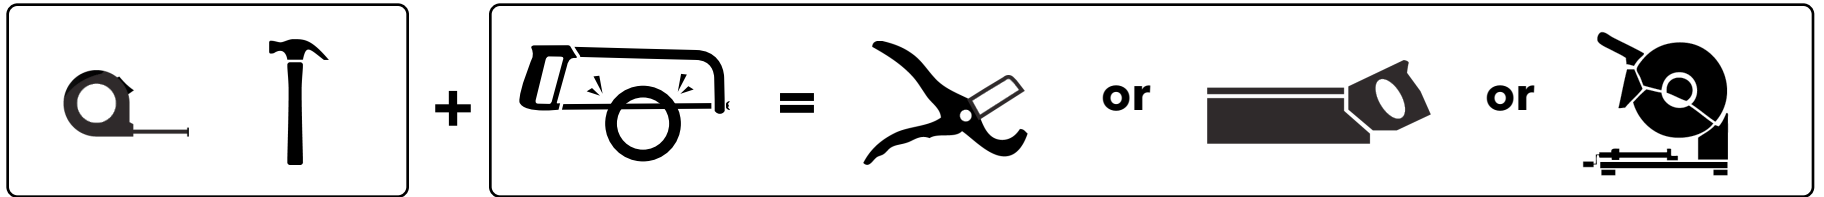


or

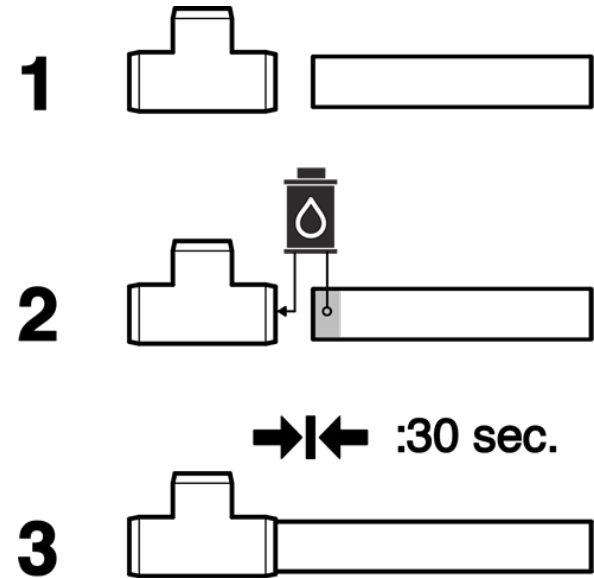

# Parts

Quantity	Image	Description	Part Number
<b>1x</b>		1-1/4" 3-Way Elbow	F1143WE
<b>2x</b>		1-1/4" 4-Way Tee	F1144WT
<b>4x</b>		1-1/4" Tee	F114TEE
<b>2x</b>		1-1/4" 90° Elbow	F11490E
<b>3x</b>		1-1/4" Caster Fitting Insert	F114CF7
<b>20x</b>		1-1/4" Pipe Clamp (4 in. L)	P114CLP
<b>3x</b>		Caster w/ Brake	C003BRK

**Additional  
Supplies**

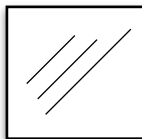

4 Mil. To 6 Mil.  
Plastic Sheetting

(Approx. 8' x 8'  
required per partition.)


# Pipe



= 1-1/4" (1.660" OD)



= 40 ft.

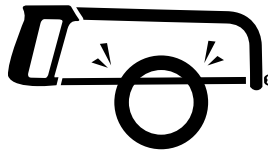




=

36"





12x



1

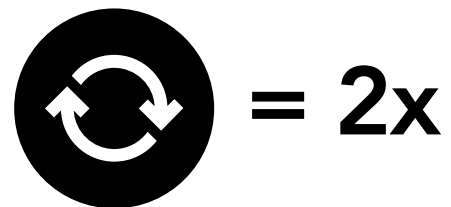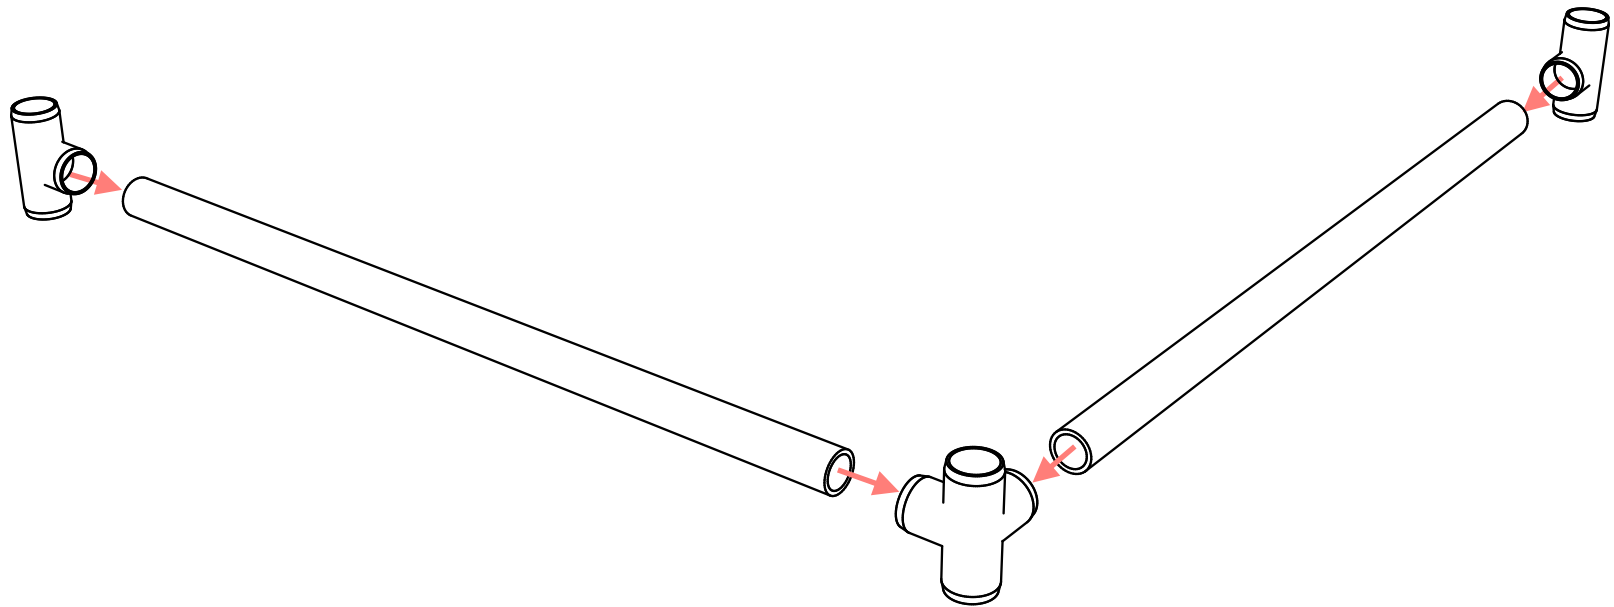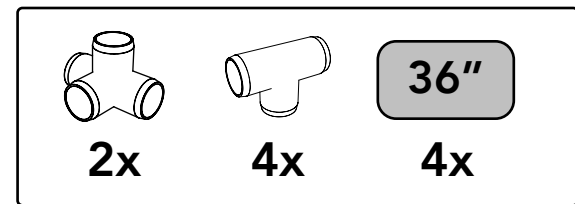

2

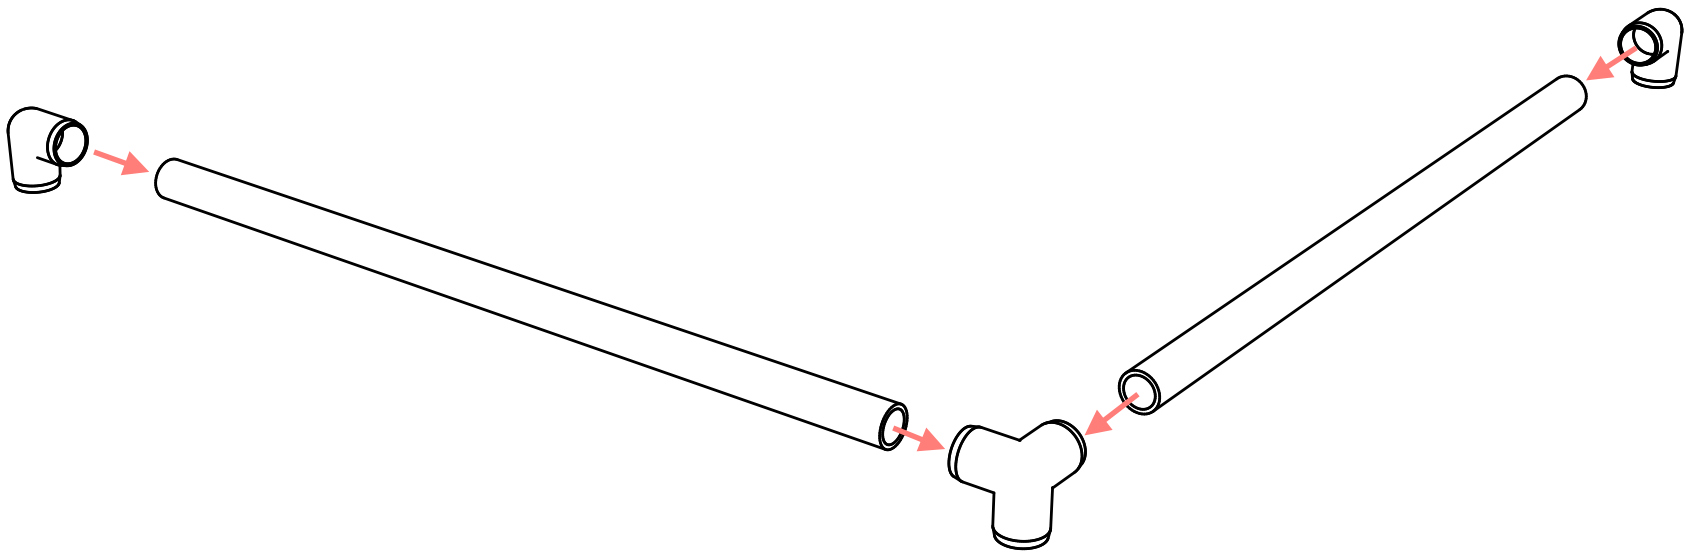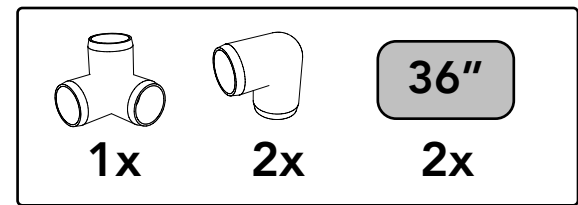


3

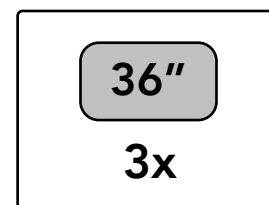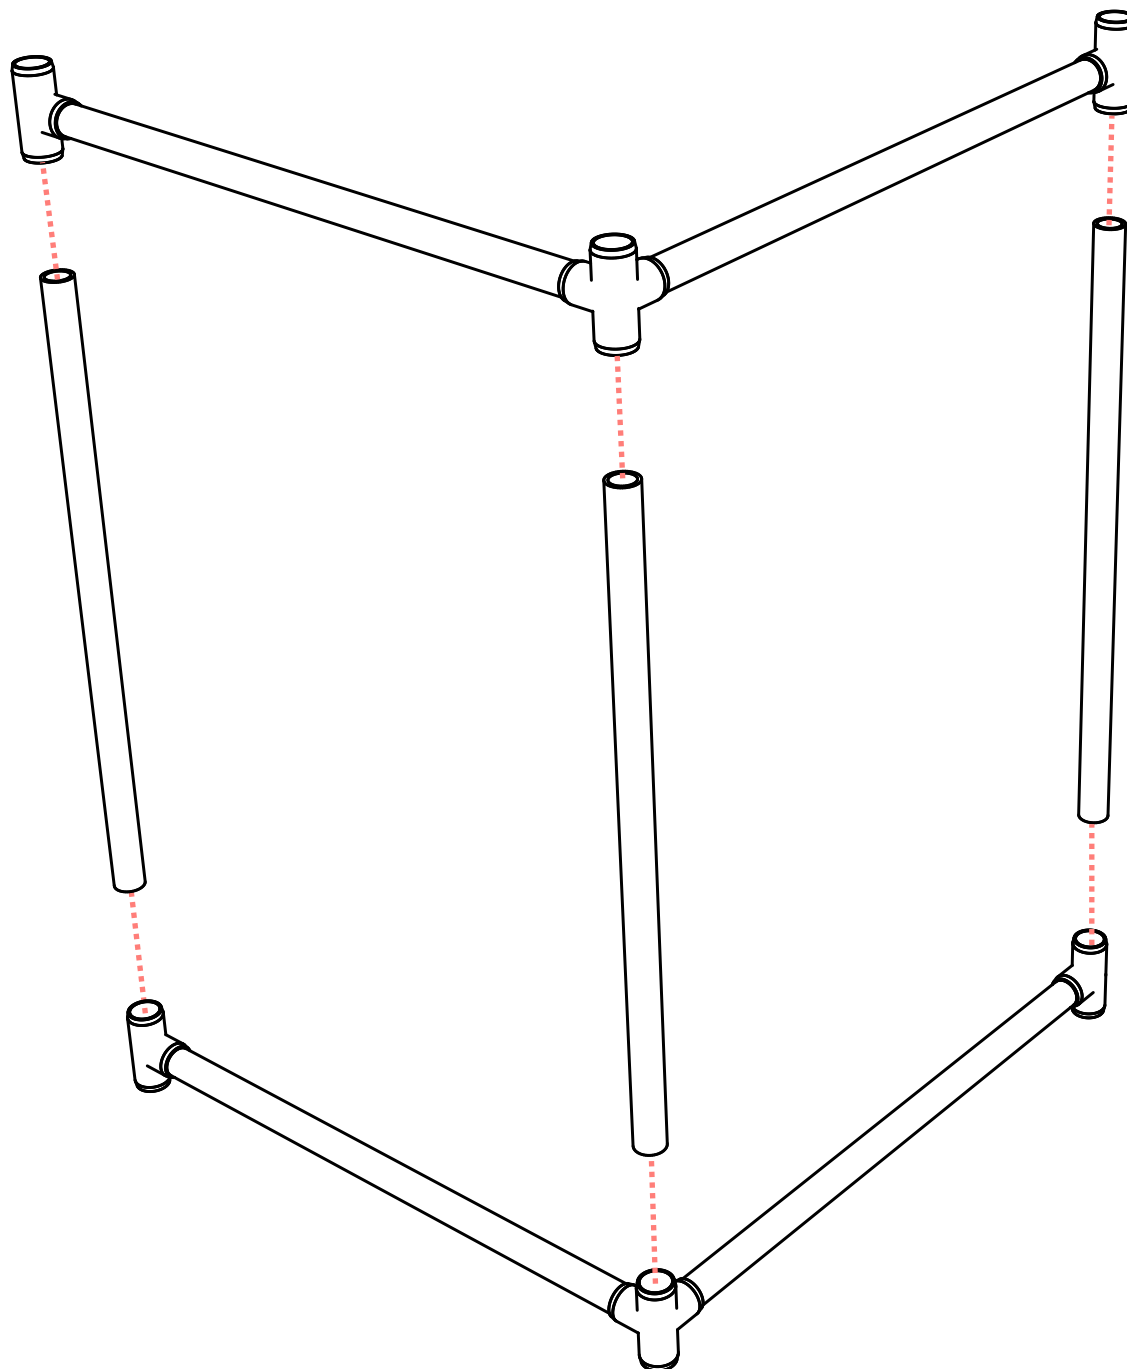





4

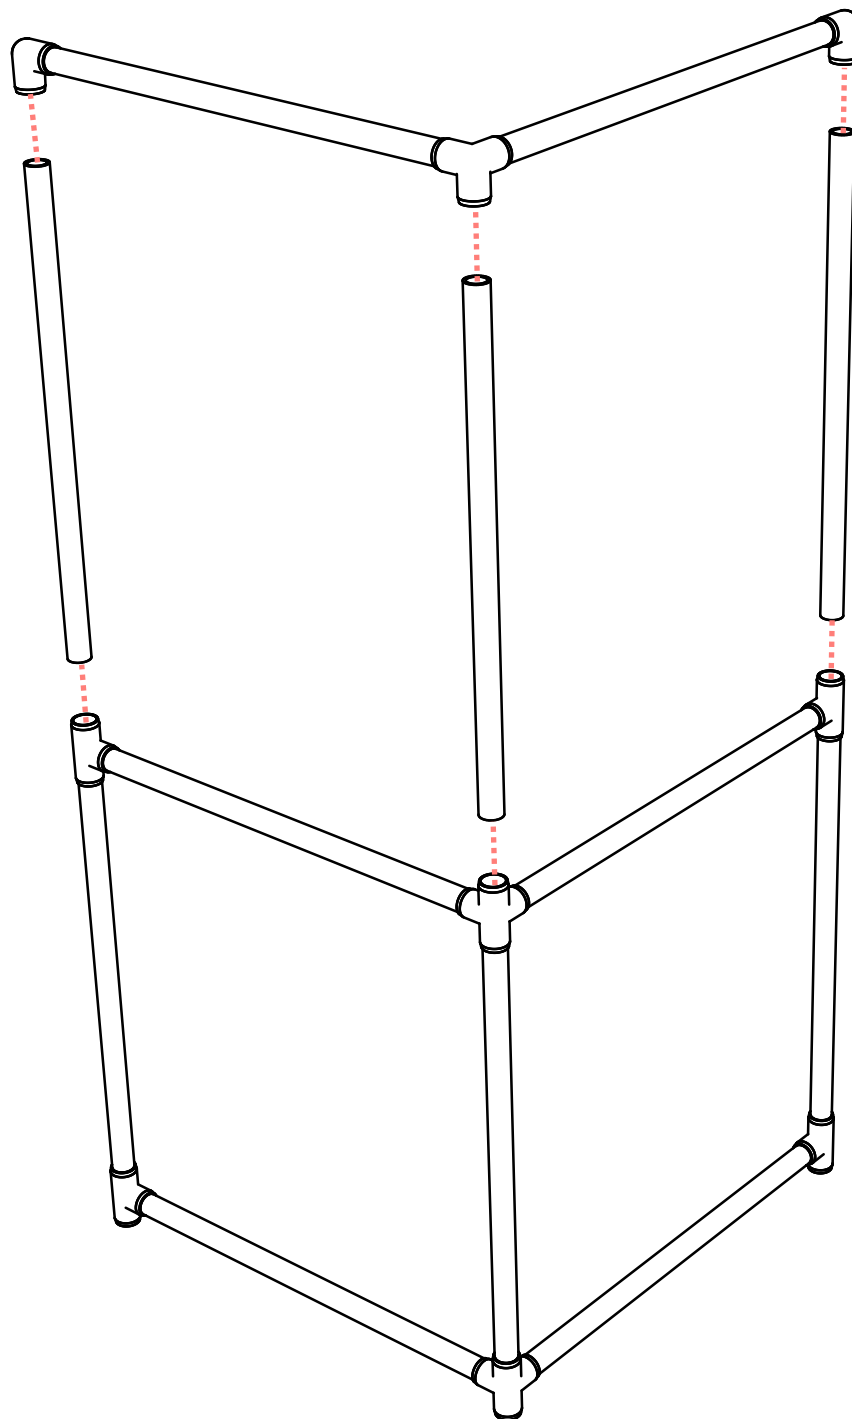



36"  
3x

5

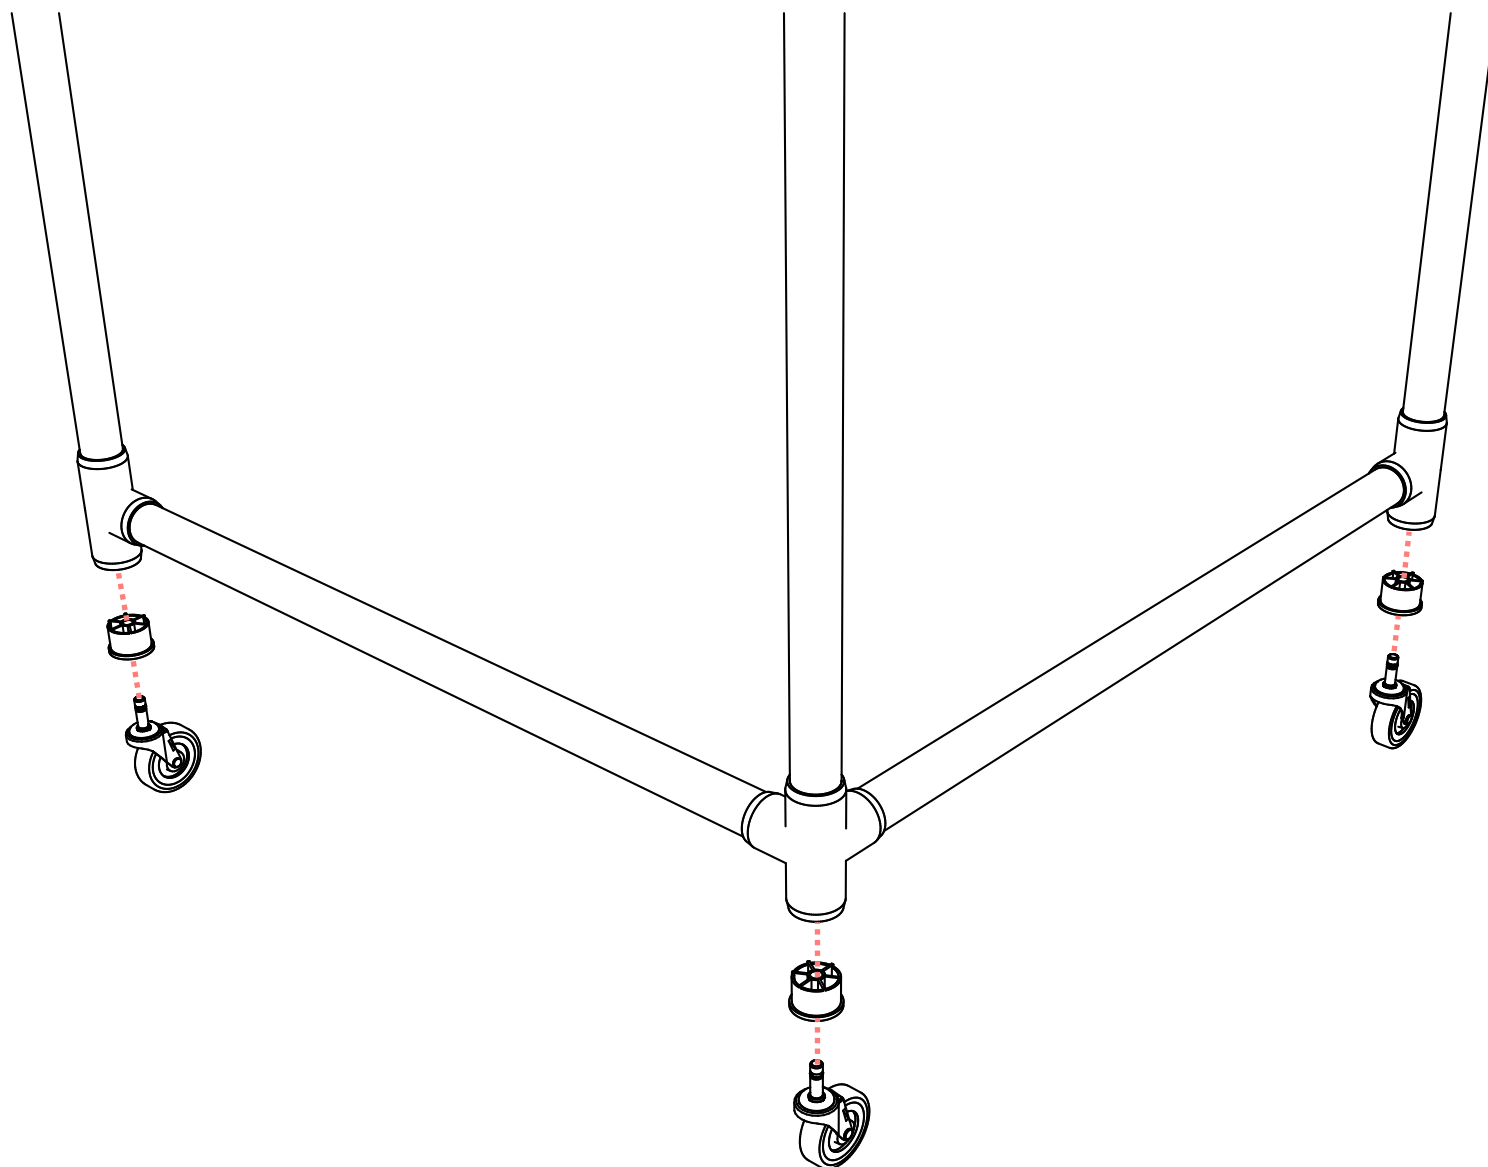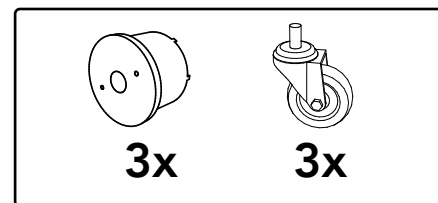

6

- Align the plastic sheeting over the frame vertical pipes and clamp the center of the plastic sheeting to the center pipe stack.
- Verify that both sides and top of the plastic sheet will extend to all sides of the partition. Adjust as necessary.

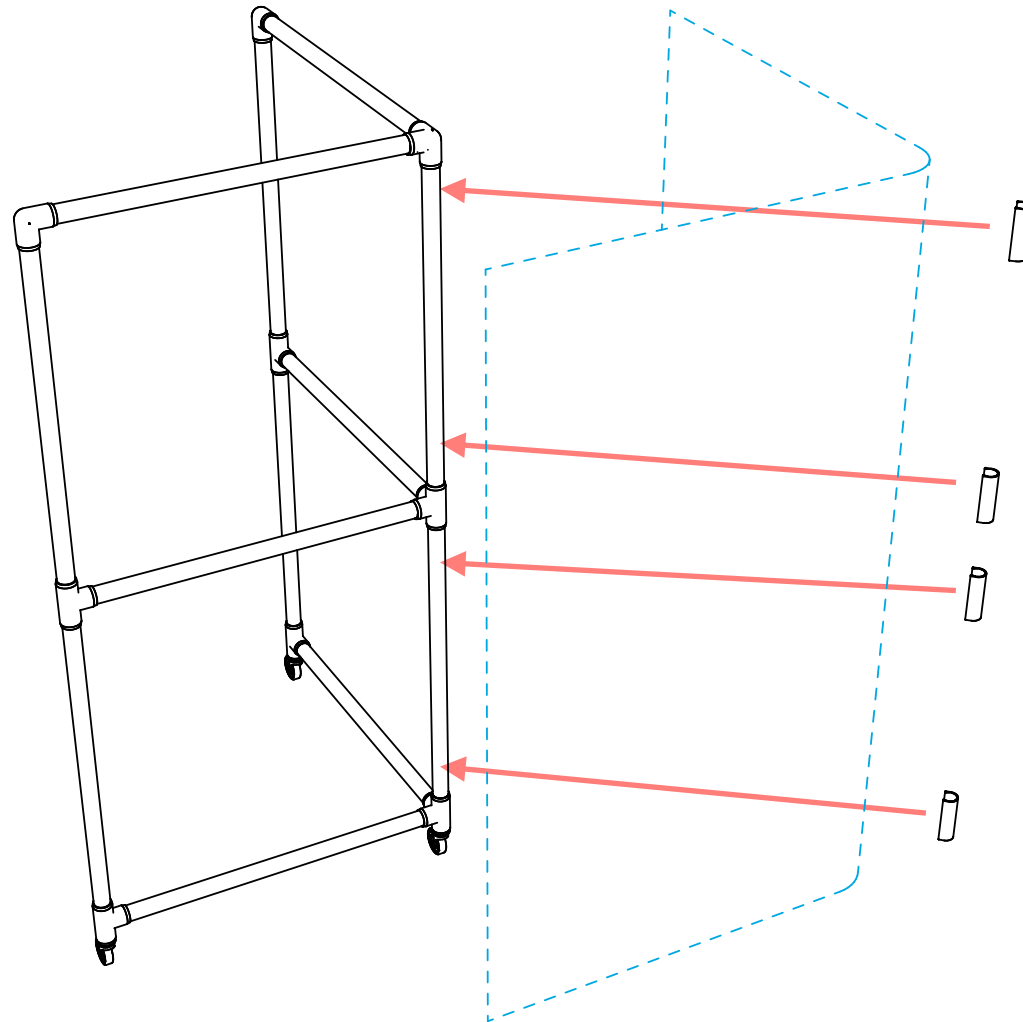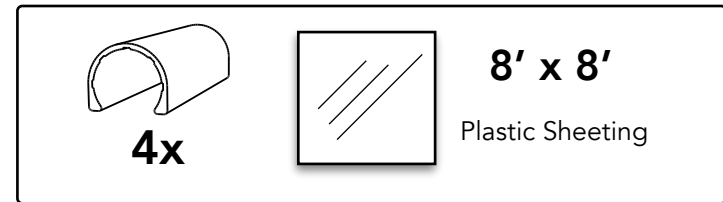

# 7

- Pull the plastic sheeting and apply the remaining PipeClamps along the outer perimeter of the partition and snap them onto the PVC pipe segments.
- Carefully trim away any excess making sure not to puncture the plastic.

