
PVC Kayak Cart a FORMUFIT PVC Plan





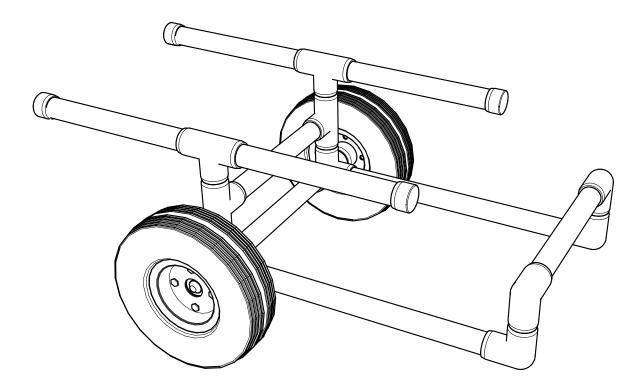

Important information. Read carefully. Keep this information for further reference.

WARNING

Serious or fatal injuries can occur from using power tools when cutting PVC pipe. Be sure to read and understand the instructions that came with your power tools before using them.

PVC cement is a noxious chemical that should be used in a well ventilated area. If you become dizzy, light-headed or disoriented, move to fresh air.

Legal

DISCLAIMER: The information provided within this manual is for informational purposes only. FORMUFIT accepts no responsibility, and is excluded from all liability for damage and/or loss which may be suffered by any other party as a result of using or in connection with such use or loss of use of this information, including but not limited to loss of profit, loss of opportunity, loss of business, indirect damages, incidental damages, special or consequential loss, injury or loss of life.

Additional Information


For additional information on how to cut, prepare and assemble PVC, please review our FORMUFIT PVC Field Manuals available at:

http://www.formufit.com/guides

To order fittings, connectors, pipe or accessories for this project, visit FORMUFIT online at:

http://www.formufit.com

Tools

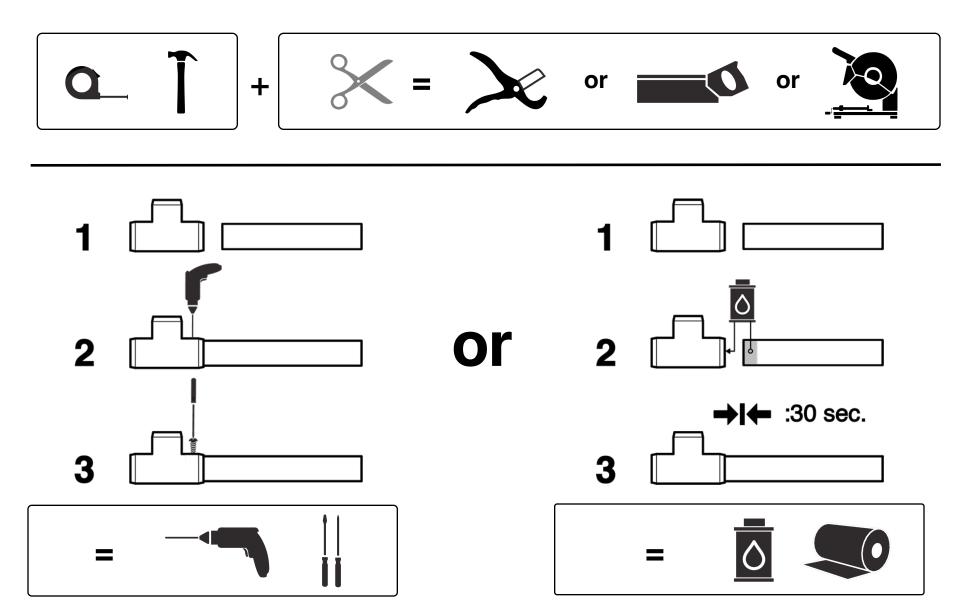

Parts

Quantity	Image	Description	Part Number
4x		1" External End Cap	F001EEC
4x		1" Tee PVC	<u>F001TEE</u>
4x		1" 90-Degree PVC Elbow	<u>F00190E</u>
2x		1" 4-Way PVC Tee	<u>F0014WT</u>
2x		1-1/4" Caster Pipe Cap*	<u>F114CP7</u> *

FORMUFIT 1-1/4" Caster Pipe Caps are compatible with 1" size Schedule 40 PVC Pipe by inserting them inside the bore of the PVC pipe.

Additional Parts

The items included in the list below are not sold by FORMUFIT, but are available from outside vendors.

Quantity	Image	Description	Available From / Recommended
5x	\bigcirc	10" Long Pool Noodle (with 1" Center Hole), segments	Most Department or Hardware Stores (Seasonal)
2x		10" Utility Wheel (5/8" Bore*)	<u>Harbor Freight 67465,</u> <u>69388, 63515</u>
2x		3/8" x 5/8" Steel or Nylon Spacers	Most Hardware Stores
2x		3/8" Axle Hat Nuts	Most Hardware Stores
1x		3/8" Diameter Solid Metal Rod (3' Long)	Most Hardware Stores

- * Bore indicates the diameter of the hole inside of the wheel.
- * Spacers should have a 3/8" inner diameter and an 5/8" outer diameter.

Pipe

